

 
# 03 - Adjusting Table Angle



## INTRODUCTION



The angle of the bandsaw's table can be adjusted to produce angled cuts. Follow this SOP to adjust the angle of the table.

## Step 1 — Loosen the locking knobs

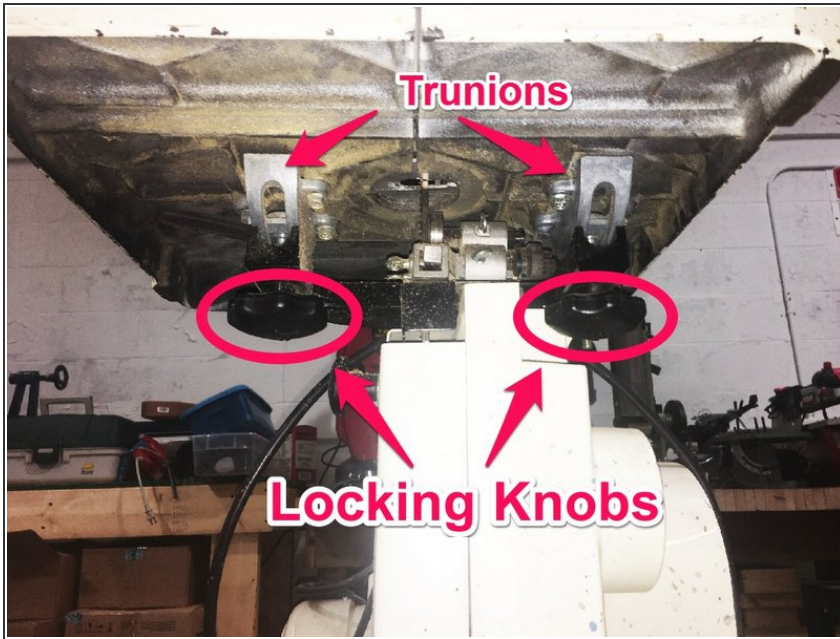


- Loosen the locking knobs on the underside of the table by turning the knobs counter-clockwise.
- **Key Point:** The knobs only need to be turned until the table is free to tilt (no more than about 1/2 a turn, usually)

## Step 2 — Rotate the table

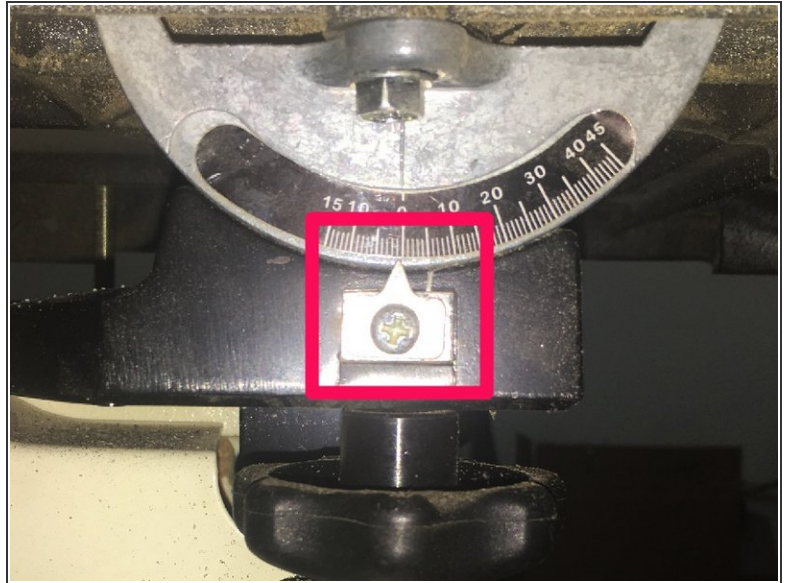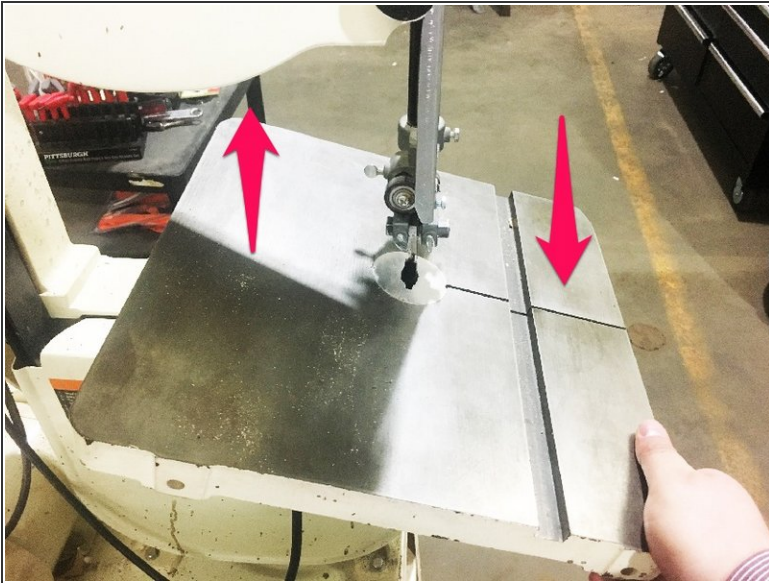

- Rotate the table in the direction of your desired angle.
- **Key Point:** If the blade guide is adjusted too close to the table, there may not be enough room to tilt the table. Refer to the **Adjusting Blade Guides SOP** to raise the blade guides out of the way of the tilting table.
- Use the pointer and scale on the front of the machine to move the table to your angle.
- **Key Point:** It's good practice to use a bevel gauge or other sample angle to confirm that the setting shown by the pointer is correct.

### Step 3 — Tighten the locking knobs

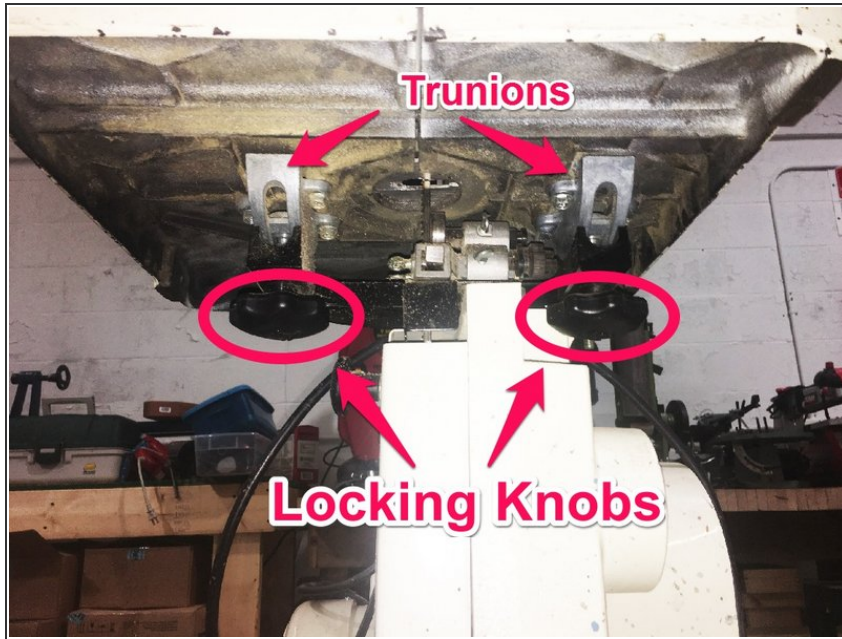

- Tighten the locking knobs on the underside of the table by turning the knobs clockwise.
- Key Point: The table shouldn't tilt at this point. If the saw is still able to move, check that the locking knobs are tightened or ASK FOR HELP.