03 - Sending a Job to the Laser Cutter

Describes how to download a job from RDWorks to the machine.




INTRODUCTION

In this SOP you'll transfer your job from RDWorks to the machine in preparation for cutting. You should already have completed:


- 04 Laser Cutter Focusing
- 01 RDWorks Job Setup

Step 1 — Open your RLD file (if not already open)

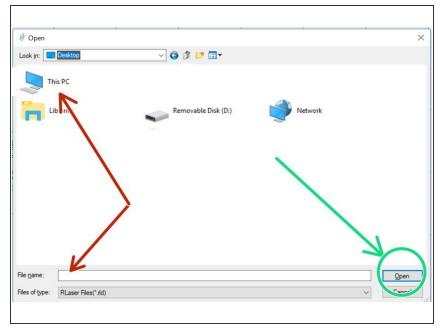


- If your file is already loaded into RDWorks, you can safely skip to step 2
 - Click File -> Open on the menu bar.
 - Select your file from the file list.
- Click Open.

Step 2 — Confirm Origin

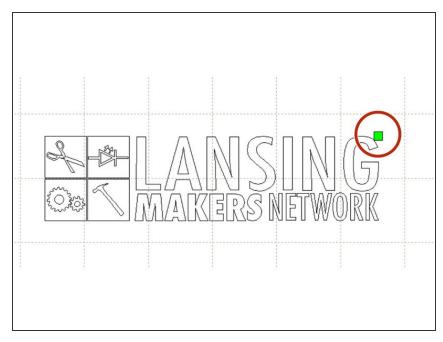


- Confirm that your origin point is set correctly.
- If you need to adjust your origin see: Setting the origin

Step 3 — Check Work Settings

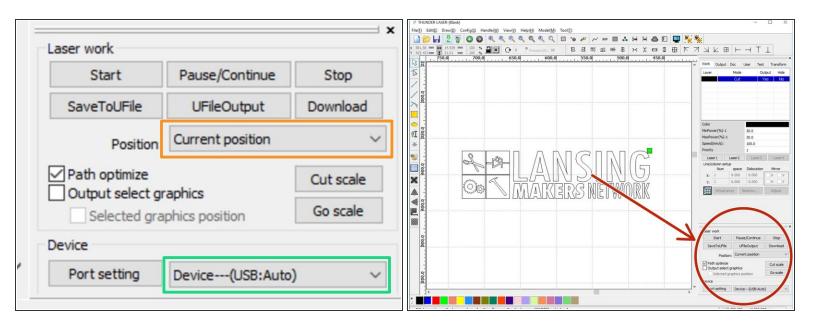

- Locate the "Laser Work" panel in the bottom right hand corner of RDWorks.
- Check that Position is set to "Current Position"
- Check the "Device---(USB:Auto)" is selected.


Step 4 — Download Job to Machine

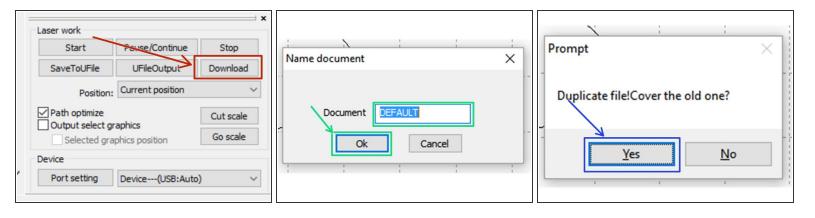

- Click Download in the Laser Work panel.
- When prompted to "Name Document" click "OK" to accept the default name.
 - You're more then welcome to name your document. Documents are purged on a regular basis to keep the machine from slowing down downloads, however.
- When promted to "Cover the old one?" choose Yes

This document was generated on 2022-01-26 03:00:23 AM (MST).

Step 5 — Download Success

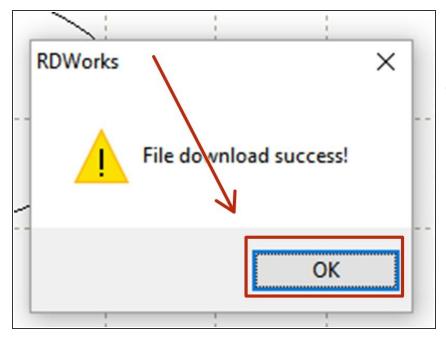

- Click OK to close the Download success dialog box.
- If your download fails check:
 - The machine is on.
 - The machine is not currently running a job.
 - The USB cable is connected.

Step 6 — Open the file on the machine







- On the machine controller, Tap the File Key
- Use the cursor keys to select your file.
 - (If you just downloaded your file, it should be first in the list)
- Press Enter
- Your file should be loaded and its preview should display in the LCD screen.

You are now ready to continue to focusing the laser cutter.

This document was generated on 2022-01-26 03:00:23 AM (MST).